

M 131 Smart Voice Mouse operation manual



Front view

Thank you for choosing Smart Voice Mouse

Please read the manual carefully before using this product

Product Description

The M131 AI voice mouse is an innovation product, in addition to its basic functions, it also achieve some useful functions, such as: voice typing, voice translation, voice search, voice control, screenshot recognition.

In the meantime, the user can also use the product to access ChatGPT 4o, increasing the working efficiency of your daily works.

Precautions:



1. The mouse will automatically enter the sleep state if it is not used for a long time, just press any key from the mouse to wake it up.
2. Support: Win7/Win8/Win10/Win11/MacOS system

2.4G mode

1. Turn on the computer
2. Insert the receiver into the computer USB port
3. Switch the mouse into the “ON” position
4. Click the mode button, switching into 2.4G mode (Green light flashing)
5. After the connection is successful, the green light is always on for 5 seconds, the AI mouse can be used normally (if it cannot be used normally, please check the operational manual)

Bluetooth mode

1. Turn on the computer and enter into system Bluetooth search module, try to start Bluetooth scanning
2. Switch the mouse into the “ON” position
3. Click the mode button, switching into Bluetooth mode (Blue light flashing)
4. Make sure the name of the MicLink Bluetooth device appears in the Bluetooth search list.
5. After the connection is successful, the blue light is always on for 5 seconds, the AI mouse can be used normally. (If it cannot be used normally, please check the operational manual)

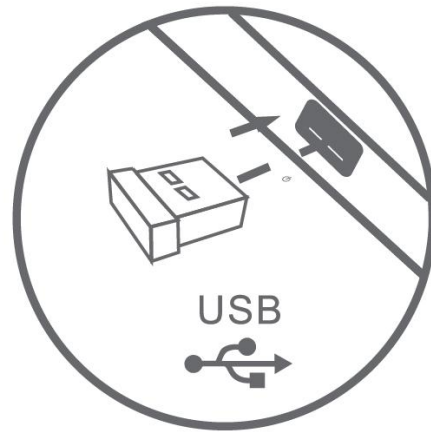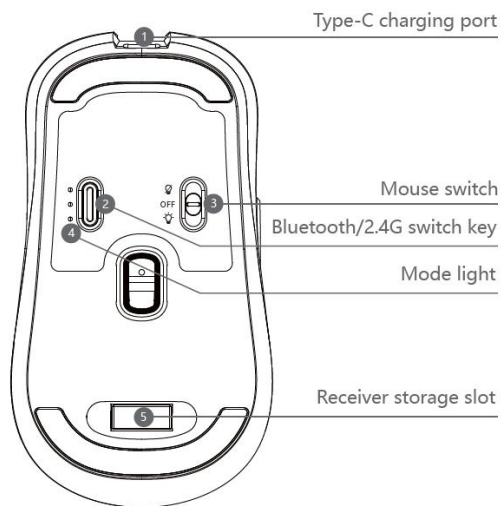

Mode switch:

Press the mode switch button, Switching between 2.4G mode and Bluetooth mode (factory default is 2.4G mode)

Note: we recommend the customer using 2.4G mode to connect with AI smart mouse.

Charging method:

LED display in the mouse indicates actual battery power condition, when the mouse in low battery power condition (below 20% of battery power), it should use Type-C cable from the mouse accessories box to connect with Mobile phone charging head, to do the battery charge. When the LED display indicate 100%, it means finish the full battery charge.

The mouse factory default is 2.4G mode, and it has been paired. It can be used directly when inserted into the receiver.

For re-pairing, please follow the below steps.



2.4G mode: switch the mouse into 2.4G mode, the green light flashes slowly, Inserting the receiver into computer USB port, Pressing and holding the mode button for 3-5 seconds , waiting for the green light flashes quickly, the mouse enters into pairing mode, putting the mouse close to the receiver, the green light flashes for 5 seconds, it means the mouse can be used normally (if it fails, repeat the above operations).

Bluetooth mode: Turn on the computer Bluetooth search module. switch the mouse into Bluetooth mode, the blue light flashes slowly, Pressing and holding the mode button for 3-5 seconds, waiting for the blue light flashes quickly, the mouse enters pairing mode, in the meantime, making sure Bluetooth search list has the mouse device appears. If click to connect, the green light flashes for 5 seconds, it means the mouse can be used normally (if it fails, repeat the above operations).

Driver Installation

check with your local partners to obtain the latest version of mouse software

Notes:

- 1., When antivirus software attempts to block mouse software, choose to trust mouse software and allow it to run
2. if mouse and the software are connected normally, the mouse software icon will be displayed in blue () , if the mouse Disconnected from the software, the software icon will be grayed out ()

Voice typing

1. Short voice mode: Select input voice to text information area, press typing button of the mouse, the voice typing is correct working.
2. Long voice mode: Select input voice to text information area, in the meantime, choosing long speech recognition mode, the voice typing is correct working.

Note: if you choose the long speech recognition mode, the accuracy of voice typing will be decrease.

Voice recognition settings

Identification with punctuation



Long speech recognition



Default language

English (UK)



Typing input

Dynamic typing




Shortcut key

Ctrl+Shift+1




Voice translation

Select the input and output language the customer needs, then press voice translation button to start the translation work.

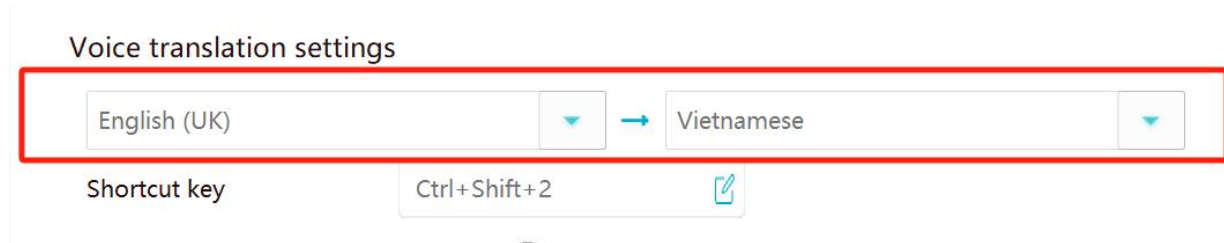

🔍 Voice search

1. Pressing and holding voice search button from the mouse to work
2. Select Google as the main search engine.

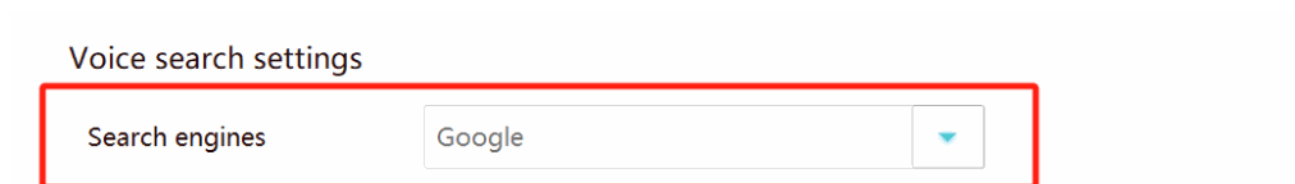


📷 Screenshot recognition/translation

1. press and release the AI button to achieve screenshot recognition
2. choose the language needs to be translate.



Common solutions for AI smart mouse.

1. Please check whether the mouse and the software are connected correctly. If the connection is normal, the software icon will be displayed as (), if there is no normal connection, the software icon will be displayed as ().
2. if the connection of AI mouse is not correct, please try to re-plug the receiver or restart the mouse software. If it still doesn't work, try turning the mouse on and off again.
3. Make that antivirus software does not prevent the correct installation of mouse programs.